

## Ultimate Dual 6.5 in. 2-Way In-Wall LCR Speaker, White Textured, Single

The Crestron® Ultimate In-Wall LCR speaker [ULTIMATE IWLCR62-W-T-EACH](#) made by Origin Acoustics delivers the pinnacle of performance for demanding residential installations. Select materials, top shelf components and a high-end appearance underscore the design behind each speaker. The result is a speaker suitable for installation in luxury residential applications, restaurants, retail spaces, universities, and office buildings.



### In the Box

1 ULTIMATE IWLCR62-W-T-EACH

#### Additional Items

- 1 Grille
- 1 Guitar pick (To turn the Spring Lock™ release)
- 1 Cutout Template




## Installation

### Prepare the Mounting Hole

Before finalizing the speaker location, check to make sure there are no fixtures, pipes, air ducts, joists, or other possible obstructions. If applicable, use a good quality stud finder to locate joists.

To identify obstructions, do the following:


- Use a drywall saw to cut a small hole at a 45° angle. An angle cut simplifies repair since the removed piece can be reinserted to help plug the hole.

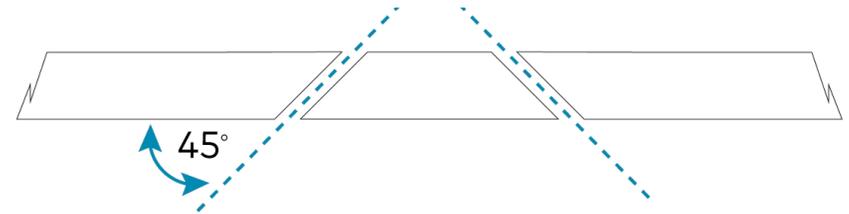

- Use a piece of stiff wire, bent into an L shape, with one end long enough to explore an area equal to the size of the speaker with the toggle clamps extended. Insert the wire into the hole, make sure it rotates freely in a complete circle and that there is sufficient depth.

If there are no obstructions, use the supplied template to trace an outline of the mounting hole on the wall. Cut the final mounting hole at a 90° angle to the wall.

## Ultimate Dual 6.5 in. 2-Way In-Wall LCR Speaker, White Textured, Single

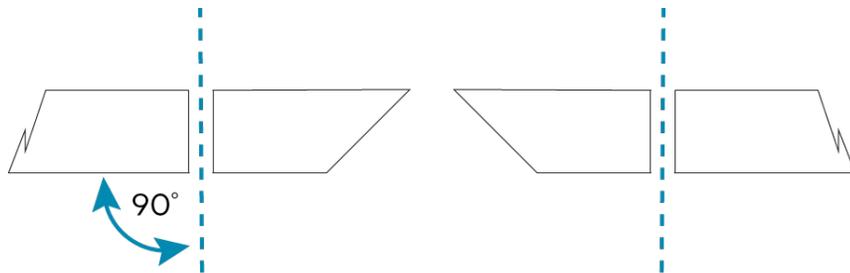

### Paint the Speaker Grille

Painting the speaker grille should be done prior to mounting.

1. Carefully remove the thin cloth on the underside of the grille, and set it aside for reinstallation.
2. Lightly spray paint the front of the grille from a distance. Be careful not to plug any of the holes.
3. Once the paint is dry, put the cloth back on the underside of the grille.

### Install the Speaker Cable

Run the speaker cable (not included) from the audio source to the speaker location, observing all appropriate local codes. Strip the ends of the speaker cable approximately 0.25 in. to 0.50 in. (~6 mm to ~12 mm) and twist the strands.

### Connect the Speaker Cable

Connect the speaker cable (not included) to the spring terminals by pressing the top of the terminals down and inserting the exposed strands into the hole. Make sure that the positive wire is attached to the red connection, and the negative wire is attached to the black connection.


### Mount/Remove the Speaker

On the speaker, make sure all the Spring Locks are in the unlocked position.

1. Fit the speaker into the hole, and using the included guitar pick, turn the Spring Lock releases 90° in the same direction as the arrows.
2. Turn the Spring Lock releases until you hear them clamp down on the wall (locked position).

**NOTE:** Do not overtighten the Spring Lock releases.

Turn the Spring Lock releases 90 degrees in the direction of the arrows

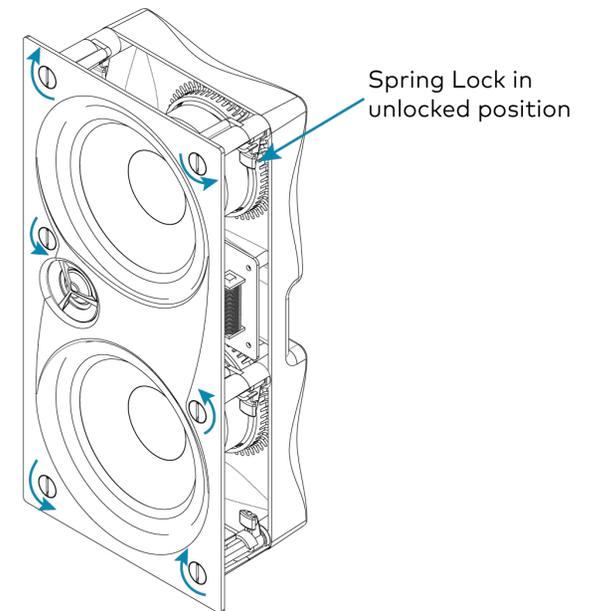

3. To remove the speaker, turn the Spring Lock releases 90° in the opposite direction of the arrows indicated. The Spring Locks will return to the unlocked position.

## Ultimate Dual 6.5 in. 2-Way In-Wall LCR Speaker, White Textured, Single



### Visit the Product Page

Scan the QR code to visit the product page.

ULTIMATE IWLCR62-W-T-EACH



<https://www.crestron.com/model/6511857>

### Additional Information

#### Original Instructions

The U.S. English version of this document is the original instructions. All other languages are a translation of the original instructions.

#### Regulatory Model: M202046007

Crestron product development software is licensed to Crestron dealers and Crestron Service Providers (CSPs) under a limited nonexclusive, nontransferable Software Development Tools License Agreement. Crestron product operating system software is licensed to Crestron dealers, CSPs, and end-users under a separate End-User License Agreement. Both of these Agreements can be found on the Crestron website at [www.crestron.com/legal/software\\_license\\_agreement](http://www.crestron.com/legal/software_license_agreement).

The product warranty can be found at [www.crestron.com/warranty](http://www.crestron.com/warranty).

The specific patents that cover Crestron products are listed at [www.crestron.com/legal/patents](http://www.crestron.com/legal/patents).

Certain Crestron products contain open source software. For specific information, visit [www.crestron.com/opensource](http://www.crestron.com/opensource).

Crestron and the Crestron logo are either trademarks or registered trademarks of Crestron Electronics, Inc. in the United States and/or other countries. Origin Acoustics and Spring Lock are either trademarks or registered trademarks of Origin Acoustics, Inc. in the United States and/or other countries. Other trademarks, registered trademarks, and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Crestron disclaims any proprietary interest in the marks and names of others. Crestron is not responsible for errors in typography or photography.

©2021 Crestron Electronics, Inc.

Doc. 8978A

07/26/21