

## Cevo Mini "How To" Summary Guide

### BUTTON SEQUENCE FUNCTIONS

---

# REBOOT

1. Remote must be UNPLUGGED/UNDOCKED
2. Press AND hold Power + Menu Buttons for 8 seconds
3. This will retain the remote settings and setup within Crestron Home® OS



# FACTORY RESET

1. Remote must be UNPLUGGED/UNDOCKED
2. Press AND hold Power + Rewind Buttons for 15 seconds
3. This will erase the remote settings and setup within Crestron Home OS and return the remote back to the out-of-the-box settings




## Cevo Mini "How To" Summary Guide

### BUTTON SEQUENCE FUNCTIONS

---

# TRANSPORT MODE

1. Remote must be UNPLUGGED/UNDOCKED
2. Press AND hold Power + Exit Buttons for 30 seconds
3. This mode powers the remote down to ship the remote
4. To take the **remote out of transport mode**, plug the remote in via the USB-C® power input or dock the remote

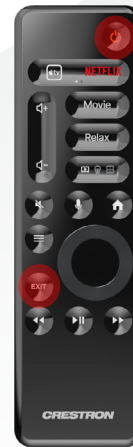

# DEMO MODE

1. Remote must be UNPLUGGED/UNDOCKED
2. Press AND hold Power + Fast Forward Buttons for 15 seconds
3. Demo mode shows the remote features without the need to be connected to a control system. This will not erase the settings of the remote in Crestron Home OS
4. To take the **remote out of demo mode**, follow the same instructions (Power + Fast Forward Buttons for 15 seconds)

