



Security Reference Guide

DGE-1000

Have feedback on this document? Contact docfeedback@crestron.com.

Original Instructions

The U.S. English version of this document is the original instructions.
All other languages are a translation of the original instructions.

Crestron product development software is licensed to Crestron dealers and Crestron Service Providers (CSPs) under a limited nonexclusive, nontransferable Software Development Tools License Agreement. Crestron product operating system software is licensed to Crestron dealers, CSPs, and end-users under a separate End-User License Agreement. Both of these Agreements can be found on the Crestron website at www.crestron.com/legal/software_license_agreement.

The product warranty can be found at www.crestron.com/warranty.

The specific patents that cover Crestron products are listed at www.crestron.com/legal/patents.

Certain Crestron products contain open source software. For specific information, visit www.crestron.com/opensource.

Crestron, the Crestron logo, and Crestron Home are either trademarks or registered trademarks of Crestron Electronics, Inc. in the United States and/or other countries. Android is either a trademark or a registered trademark of Google, Inc. in the United States and/or other countries. Linux is either a trademark or a registered trademark of Linus Torvalds in the United States and/or other countries. Active Directory, Microsoft, PowerShell, and Windows are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries. Sonos is either a trademark or registered trademark of Sonos, Inc. in the United States and/or other countries. Other trademarks, registered trademarks, and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Crestron disclaims any proprietary interest in the marks and names of others. Crestron is not responsible for errors in typography or photography.

©2024 Crestron Electronics, Inc.

Revision History

Rev	Date	Notes	Author(s)
A	October 25, 2024	Initial version	IH, YP

Please send comments and change recommendations to:

SecurityDocs@crestron.com

Contents

Overview	1
Third-Party Software	1
Ports and Protocols	2
Prerequisites	3
Operating Environment	3
Firmware Version	3
Device Access	3
Default Configuration Settings	3
Required Configuration	5
Configure the Network	5
DHCP or Static IP Address Configuration	5
802.1X Authentication	5
Set Password Policy	8
Set Date and Time	9
Disable Auto Discovery	10
Disable Cloud Features	10
Enable User Account Locking	10
Change Login Failure Count	11
Change Lockout Time	11
Display Last Logged-In Information	11
Enable Session Inactivity Timeout	11
Enable Audit Logging	12
Set Logon Banner	13
Initial Login Process	14
Enable All Certificate Verifications	14
Load Web Server Certificates	14
Optional Configuration	15
Enable or Disable Web Server	15
Enable User Login IP Blocking	15
Change Login IP Failure Count	15
Change IP Blocked Time	15
Configure SNMP	16
Enable or Disable SNMP	16
Add or Remove an SNMP Manager	16
Enable or Disable Unrestricted SNMP Access	17
Configure SNMP Access Information	17
Enable or Disable SNMP Notifications	18
Add Users and Groups	18

Enable Sending Audit Logs to Remote Syslog Server	18
Secure Control System Connection	19
Management Functions	20
Firmware Update	20
User and Group Management	20
User Group Rights	20
Add Local User	21
Delete Local User	21
Add Local Group	22
Delete Local Group	22
List Local Groups	22
Add Domain Group	23
Remove Domain Group	23
List Domain Groups	23
List Users	24
List Group Users	24
Show User Information	24
Add User to Group	24
Remove User from Group	25
Update Local Password	25
Reset User Password	25
User Login IP Blocking Management	25
List Blocked IP Addresses	25
Add IP Address to Blocked List	26
Remove IP Address from Blocked List	26
User Account Locking Management	26
Add User to Locked List	26
Remove User from Locked List	26
List Locked User	27
Certificate Management	27
Certificate Requirements	28
Certificate Commands	28
Backup and Restore Functionality	30
Additional Instructions	32
Use OpenSSL to Create a Certificate Signing Request (CSR)	32
Create a Configuration File	32
Generate the Private Key	34
Create the CSR	34
Create and Sign the Certificate	34
Load the Certificate	35
Clean Up	35

Overview

This document describes the steps needed to harden a Crestron® installation with a DGE-1000 digital graphics engine and assumes a basic understanding of security functions and protocols. This guide provides information about the system configuration used for DGE-1000 firmware release 1.0001.00045 or later.

The information in this guide pertains to the DGE-1000 digital graphics engine, which runs Android™ 9 OS and OpenSSL version 1.1.1.

Third-Party Software

All third-party and open source software and licenses used in Crestron applications are detailed in the EULA included with the device. The DGE-1000 ships with native support for the Sonos® app, which downloads to the device only when it is enabled through a custom user project or through the Crestron Home® OS platform. The app is created and owned by Sonos.

Ports and Protocols

The following ports and protocols may be used by the device depending on the system design and configuration.

Crestron Control Devices

Function	Destination Port	From (Sender)	To (Listener)	Notes
Crestron-CIP	41794/TCP	Device	Control System	Crestron Internet Protocol
Crestron-SCIP	41796/TCP	Device	Control System	Secure Crestron Internet Protocol

Common Ports

Function	Destination Port	From (Sender)	To (Listener)	Notes
NTP	123/UDP	Device	NTP Server	Network Time Protocol (NTP)
SSH/SFTP	22/TCP	Admin Workstation	Device	Used for configuration, console, and file transfer
LDAP	3268/TCP	Device	LDAP Server	LDAP queries targeting global catalogs
HTTPS	443/TCP	Admin or End User Workstation	Device	Secure web configuration
HTTPS	443/TCP	Device	XiO Cloud® Service	For XiO Cloud services only and not required for device functionality. A persistent connection is made via AMQP over WebSockets. HTTPS services such as routing lookups and file transfers may be used.
DNS	53/TCP and UDP	DNS Server	Device	Domain name service
DHCP	67/UDP	Device	DHCP Server	DHCP addressing
DHCP	68/UDP	DHCP Server	Device	DHCP addressing
HTTP	80/TCP	End User Workstation	Device	Redirect to Secure Web Configuration on port 443
Remote Syslog	Configurable	Device	Remote Syslog Server	Uses TLS
SNMP	161/UDP	SNMP Manager	Device	
SNMP Traps	162/UDP	Device	SNMP Manager	

Prerequisites

In order to perform a secure configuration, the following prerequisites must be met.

Operating Environment

Crestron assumes the following about the operating environment of its systems:

- The device does not support MFA (Multi-Factor Authentication).
- Physical security is commensurate with the value of the system and the data it contains and is assumed to be provided by the environment.
- Administrators are trusted to follow and provide all administrator guidance.

Firmware Version

The DGE-1000 must be running firmware version 1.0001.00045 or later.

Device Access

The administrator can access and configure the device by using a web browser or an SSH client. This document describes device configuration using an SSH client, which provides access to console commands. Some configuration capabilities can only be performed by issuing console commands. Additionally, some aspects of configuration can be performed via Crestron Toolbox™ software or the XiO Cloud® service.

NOTE: The SSH client that is used must be capable of connecting to the device using SSHv2.

As an alternative to using an SSH client, the same console commands can be executed through the USB port.

The device also provides local setup pages for commonly used configuration settings. The local setup pages can be accessed by placing five fingers on the connected touch screen display and holding for approximately 20 seconds.

Default Configuration Settings

In order to configure the device, it must first be placed in its factory default state. A device can be returned to this state by entering the following command on the console:

```
RESTORE
```


If you do not have access to the console (for example, the password has been lost), a factory reset may be performed as follows:

1. Press the **RESET** button 10 times, allowing for 10 seconds between presses.
2. The device will boot from the backup image and give the user the option to restore the device.
3. Select the restore option.

Required Configuration

The following sections describe the configuration changes required for the device for a secure deployment.

Configure the Network

The following sections provide information about the tasks necessary to configure the network.

DHCP or Static IP Address Configuration

To configure the device to communicate on the local LAN, the following changes must be made. If DHCP is available on the local network, then no additional configuration changes are necessary. If DHCP is not available or if the administrator wishes to manually set the network configuration, then the IP address, IP mask, default gateway, and DNS server settings must be set. These configuration settings may be set through the local setup pages or by connecting the device to a network which supports DHCP, and setting them through the web pages or SSH console. If using the console, the network information can be configured by using the following commands:

```
dhcp 0 off
```

Turns off DHCP so that the manually configured network information is used.

```
ipaddress 0 192.168.1.2
```

Sets the IP address of the device to the specified address.

```
ipmask 0 255.255.255.0
```

Sets the IP mask of the device to the specified mask.

```
defrouter 0 192.168.1.1
```

Sets the default network gateway to the specified IP address.

```
adddns 192.168.1.10
```

Sets the DNS server to use for DNS name lookups.

802.1X Authentication

802.1X is an IEEE network standard designed to enhance the security of both wireless and wired Ethernet networks. This device supports 802.1X on its primary wired Ethernet interface only. If the network requires 802.1X, the device must be configured for 802.1X before being put on the network. This configuration can be done through the USB port console or by attaching it to a temporary network which does not require 802.1X.

Before configuring 802.1X, perform the following tasks as necessary:

- Unless server authentication is going to be disabled, the trusted x.509 certificate or certificates that will be used to verify the 802.1X server's certificate must be loaded into the device. Use the certificate management commands to load the trusted certificates into the device. These may be Root or Intermediate certificates. Refer to the [Required Configuration on page 5](#) section for instructions.
- If EAP-TLS authentication is going to be used, a client certificate will be needed and must be loaded into the device. Refer to the [Required Configuration on page 5](#) section for instructions to load a client certificate into the "machine" store.

Once 802.1X configuration is complete, restart the device to activate those settings. The device will try to connect to the 802.1X network when it starts up.

802.1X Configuration

In order to configure and use 802.1X, various aspects of 802.1X will need to be configured, including enabling it, setting up server authentication, and selecting a client authentication method. The following commands are used for this configuration:

Enable 802.1X

To enable 802.1X, issue the following command:

```
8021xauthenticate [on/off]
```

- `on` - 802.1X is enabled
- `off` - 802.1X is disabled
- No parameter - Displays the current setting

Example: `8021xauthenticate on`

Set Trusted Server Certificates

Unless server validation will be disabled, the trusted certificates that 802.1X will use to verify the server's certificate must be indicated. The full list of trusted Root and Intermediate certificates loaded into the device is not used for 802.1X—only the specific certificates selected by the `8021xtrustedcas` command are used. As indicated earlier, the trusted certificates must first be loaded into the device using the standard Certificate Management commands.

The following commands can be used to list, add, and remove certificates from the list of certificates that will be used by 802.1X.

List Certificates

To list available certificates, issue the following command:

```
8021xtrustedcas [list|listn|listu]
```

- `list` - Shows all Root and Intermediate certificates for the device
- `listn` - Shows all Root and Intermediate certificates for the device and also includes identification number of each certificate
- `listu` - Shows Root and Intermediate certificates that are used by 802.1X

Example: `8021xtrustedcas listn`

This certificate list will show the name and UID of each certificate, along with an indication of whether or not it is being used by 802.1X.

Add Certificate to 802.1X Trust List

To add a certificate to the list of trusted certificates to be used by 802.1X, issue the following command:

```
8021xtrustedcas use [certificate number] [certificate name] [certificate UID]
```

- `certificate number` - Number that identifies the specific certificate to use
- `certificate name` - Name that identifies the specific certificate to use
- `certificate UID` - UID that identifies the specific certificate to use

Only one identifier (number, name, or UID) is needed. These identifiers can be determined by listing the certificates using the `8021xtrustedcas list` or `8021xtrustedcas listn` described above. Only the `listn` command will show the certificate number.

Remove Certificate from 802.1X Trust List

To remove a certificate from the list of trusted certificates to be used by 802.1X, issue the following command:

```
8021xtrustedcas dontuse [certificate number] [certificate name] [certificate UID]
```

- `certificate number` - Number that identifies the specific certificate to remove
- `certificate name` - Name that identifies the specific certificate to remove
- `certificate UID` - UID that identifies the specific certificate to remove

Only one identifier (number, name, or UID) is needed. These identifiers can be determined by listing the certificates using the `8021xtrustedcas list` or `8021xtrustedcas listn` described above. Only the `listn` command will show the certificate number.

Removing a certificate from 802.1X does not remove the certificate from the device. The certificate will still be present in the Root or Intermediate store.

Enable 802.1X Server Validation

Under most circumstances, validation of the 802.1X server should be enabled. By default, server validation is disabled on this device.

To enable 802.1X server validation, issue the following command:

```
8021xvalidateserver [off | on]
```

- `off` - 802.1X supplicant will not validate authentication server's certificate.
- `on` - 802.1X supplicant will validate authentication server's certificate.
- No parameter - Displays the current setting

Example: `8021xvalidateserver on`

Select 802.1X Client Authentication Method

802.1X requires that the device authenticate with the server before it will be allowed on the network. The device supports two client authentication methods: PEAPv0/EAP-MSCHAPv2 and EAP-TLS. PEAPv0/EAP-MSCHAPv2 requires a user name and password, and EAP-TLS requires a client certificate.

To select the 802.1X client authentication method, issue the following command:

```
8021xmethod [password/certificate]
```

- `password` - Uses PEAPv0/EAP-MSCHAPv2 authentication
- `certificate` - Uses EAP-TLS authentication

Example: `8021xmethod password`

If EAP-TLS is selected, a client certificate must be loaded into the device as explained earlier in the 802.1X instructions.

If PEAPv0/EAP-MSCHAPv2 is selected, the user name and password to use for authentication must be entered with the following commands:

```
8021xusername [username]
```

```
8021xpassword [password]
```

Additional 802.1X Options

Additional 802.1X options may need to be configured if required by the network to which the device is connected:

- If the 802.1X server requires that a specific domain name be included with the 802.1X authentication request, the domain name can be set by issuing the following command:

```
8021xdomain [domain_name]
```

- If using PEAPv0/EAP-MSCHAPv2 authentication and the server requires the PEAP version to be sent as part of the authentication request, the PEAP version can be enabled with the `on` option in the following command:

```
8021xsendpeapver [on/off]
```

Set Password Policy

To set the password policy, issue the following command:

```
setpasswordrule{-all|-none}|{-length:minpasswordlength}{-mixed}{-digit}{-special}
```

- `-all` - All password rules are applied.
- `-none` - No password rules are applied.
- `-length:` - Specifies the minimum password length. By default, the minimum password length is six characters.
- `-mixed` - Specifies that the password must contain a lower and upper case character.
- `-digit` - Specifies that the password must contain a numeric character.
- `-special` - Specifies that the password must contain a special character.

NOTE: The `-length`, `-mixed`, `-digit`, and `-special` parameters cannot be combined with `-none`.

Example: `setpasswordrule -length:9 -mixed -digit -special`

NOTE: The following special characters are allowed: `` ~ ! @ $ % ^ & * () _ + = { } [] | ; " < > , .`

All passwords that are created, updated, or reset for local users must follow the password rules set by this command to be considered valid.

As a security best practice, Crestron recommends setting the password policy to the following:

```
setpasswordrule -length:15 -all
```

Set Date and Time

All devices use NTP to synchronize their clock. To disable NTP synchronization and set the current date and time manually, issue the following commands:

```
sntp stop
```

```
timedate hh:mm:ss mm-dd-yyyy
```

NOTE: Enter the current time (24-hour clock format, including minutes and seconds) and date.

By default, the time zone is set to UTC (code 000). This is never changed automatically and must be changed manually if desired. To set the time zone, issue the following command:

```
timezone [list | zone]
```

- `list` - Returns a list of all time zones and codes
- `zone` - Enter the code of the time zone to be used

Example: `timezone 005`

By default, NTP is enabled and is configured to get the time from `pool.ntp.org`. The device supports using up to three NTP servers, including authentication servers. Issue the following command to configure custom NTP servers for time synchronization:

```
sntp [start|stop|sync|delete {server|server2|server3}|server {args}|server2 {args}|server3 {args}]
```

- `start` - Starts synchronization
- `stop` - Stops synchronization
- `sync` - Forces synchronization one time
- `delete {server|server2|server3}` - Deletes configuration for NTP server1, server2, or server3
- `server:{address} [optional args]` - Address of primary NTP server with optional arguments
- `server2:{address} [optional args]` - Address of secondary NTP server to synchronize with optional arguments

- `server3:{address} [optional args]` - Address of secondary NTP server to synchronize with optional arguments
- `optional args`:
 - `port:{1-65535}` - NTP port (default 123)
 - `auth:{mac}` - Secured NTP MAC authentication
 - `keytype:{md5 (less secured) | sha1 | sha256}` - Key type for MAC authentication only (default sha1)
 - `key:{shared key}` - Preshared key between NTP client and server (MAC authentication only)
 - `keyid:{1-65535}` - Preshared key index between NTP client and server (MAC authentication only)
- No parameter - Displays the current settings

Example: `SNTP SERVER:macntp.example.com AUTH:mac KEYID:1
KEY:e5fa44f2b31c1fb553b6021e7360d07d5d91ff5e`

NOTE: NTP servers are configured into a particular slot. The server configured into the `SERVER` slot will be the primary server used for time synchronization. The servers configured into the `SERVER2` and `SERVER3` slots will be used as secondary servers.

Disable Auto Discovery

All devices support an auto discovery feature which allows them to be detected, report basic information, and do some basic configuration remotely. This feature is not protected by any type of authentication. Disable auto discovery with the following command:

```
autodiscovery off
```

Disable Cloud Features

All devices connect to cloud services for remote monitoring and management. If your environment or policies do not permit communications with external services, disable cloud features by entering the following commands:

```
enablefeature cloudclient off
```

```
hydrogenenable off
```

Enable User Account Locking

To prevent brute force attacks against a user's password, the device can automatically lock an account after a number of failed login attempts. This functionality operates independently and simultaneously with the device's User Login IP Blocking capability.

NOTE: Access to an account over the USB port is never blocked.

Change Login Failure Count

To change the value for the login failure count, issue the following command:

```
setuserloginattempts [number]
```

- `number` - Number of login attempts a user can have before the console is blocked. A value of 0 indicates an infinite number of login attempts. A value of -1 restores the default value.
- No parameter - Displays the current setting

Example: `setuserloginattempts 3`

As a security best practice, the failure count should be set to 3.

Change Lockout Time

To change the duration that an IP address is blocked by the console, issue the following command:

```
setuserlockouttime [number]
```

- `number` - Number of hours (suffix `h`) or minutes (suffix `m`) to block an IP address. A value of 0 specifies an indefinite amount of time. The maximum amount of time is 750h (hours) or 45000m (minutes). A value of -1 restores the default value.
- No parameter - Displays the current setting

Example: `setuserlockouttime 15m`

As a security best practice, the lockout time should be set to 15m.

Display Last Logged-In Information

Devices do not display information about a user's last login or failed login attempts by default. To have this information displayed, issue the following command:

```
showlogininfo on
```

Enable Session Inactivity Timeout

NOTE: The Enable Session Inactivity Timeout command affects console, web, and local setup page sessions.

Devices do not terminate a user session due to inactivity by default. Configure the device to terminate inactive user sessions by issuing the following command:

```
setlogoffidletime 10
```


The number set with the `setlogoffidletime` command is the number of minutes after which the session will be terminated. The number can range from 1 to 9999.

Enable Audit Logging

All devices have limited audit logging. Audit logging is turned off by default.

To configure audit logging, issue the following command:

```
auditlogging[on|off]{[all]|[none]}{[admin][prog][oper][user]}[remotesyslog]}
```

- `on` - Enables audit logging
- `-off` - Disables audit logging
- No parameter - Displays the current audit logging setting
- The following parameters are optional and are used to log commands by access level:
 - `admin` - Logs administrator-level commands
 - `prog` - Logs programmer-level commands
 - `oper` - Logs operator-level commands
 - `user` - Logs user-level commands
 - `all` - Logs all commands
 - `none` - Logs no commands
- `remotesyslog` - Writes to the remote syslog server only

Example: `auditlogging on admin oper`


Sample Log Output: `[2021-11-30T07:02:44-08:00]: EVENT: COMMAND(SHELL 172.30.255.255)
USER: admin # AUDITLogging on all`

As a security best practice, full audit logging should be turned on by entering the following command:

```
auditlogging on all
```

Set Logon Banner

If required for your installation, a logon banner can be loaded to the device that is shown when a user connects to the device successfully over SSH, a web server, or through the local setup pages. A sample logon banner is shown below.

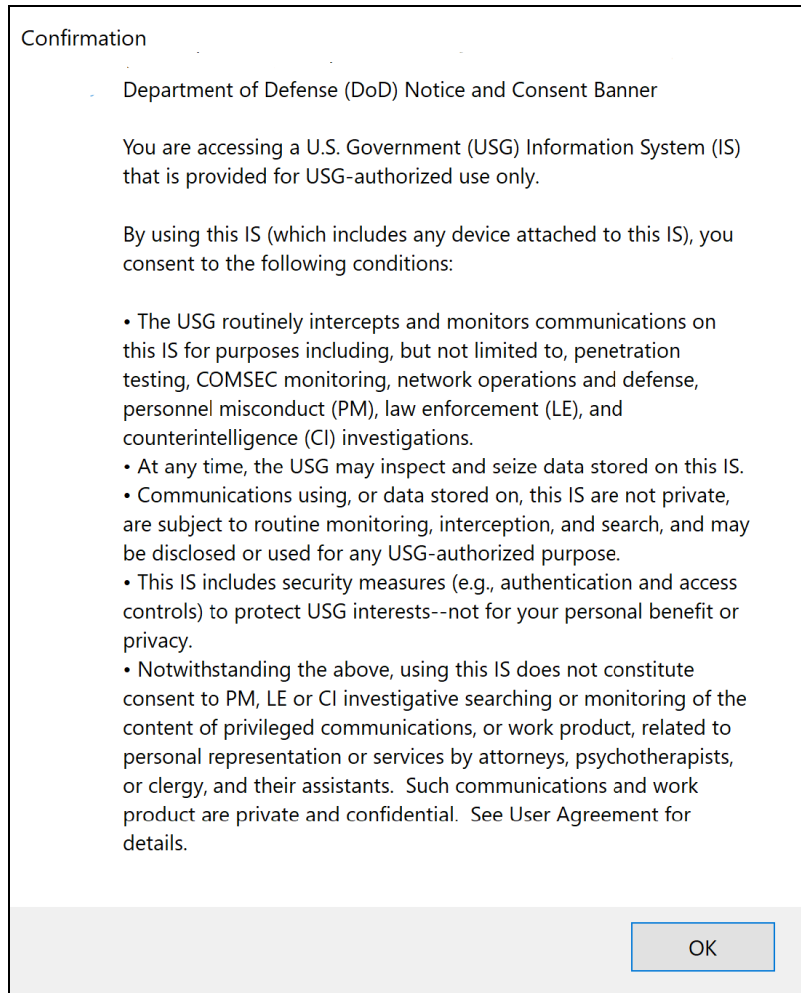

To load a logon banner to the device:

1. Create the banner text file using a text editing application. The text file must be a regular ASCII file (not using UTF-16 or any other encoding).
2. Save the text file as **banner.txt**.
3. Use an SFTP client to load the **banner.txt** file to the **\sshbanner** directory on the device.

Initial Login Process

A user name and password account must be created when the device is accessed for the first time. Using an SSH client, log in by entering `Crestron` and a blank password. To create the account, enter the desired user name and password (the password must be a minimum of 8 characters). Confirm the password by entering the password again. After the account is created, enter the user name and password to log in to the device.

NOTE: Do not lose this information. The system cannot be accessed without it.

Enable All Certificate Verifications

By default, outgoing TLS connections for some protocols will not perform a full set of verifications on the server certificate if it is presented. Enable these verifications by issuing the following command:

```
sslverify all
```

Load Web Server Certificates

The device requires a web server certificate for proper web server operation and to properly secure incoming CIP communications from other devices. Refer to the [Certificate Management on page 27](#) section for instructions to load the web server certificate and any other needed certificates.

Optional Configuration

The following sections provide information about optional device configuration settings.

Enable or Disable Web Server

All devices have an active web server. If desired, disable the web server with the following command:

```
webserver off
```

To enable the web server, issue the following command:

```
webserver on
```

Enable User Login IP Blocking

To prevent distributed brute force attacks against user logins, the device can automatically block an IP address after a number of failed login attempts from that IP address. This functionality operates independently and simultaneously with the device's User Account Locking capability.

NOTE: Access to an account over the USB port is never blocked.

Change Login IP Failure Count

To change the value for the logon failure count, issue the following command:

```
setloginattempts [number]
```

- `number` - Number of login attempts allowed before the console is blocked. A value of 0 enables unlimited attempts. The default value is 5.
- No parameter - Displays the current setting

Example: `setloginattempts 3`

Change IP Blocked Time

To change the duration that an IP address is blocked by the console, issue the following command:

```
setlockouttime [number]
```

- `number` - Number of hours (suffix `h`) or minutes (suffix `m`) to block an IP address. A value of 0 specifies an indefinite amount of time. The maximum amount of time is 750h (hours) or 45000m (minutes). The default value is 30m.
- No parameter - Displays the current setting

Example: `setlockouttime 24h`

Configure SNMP

The device supports SNMP v2x and v3. To configure an SNMP Manager to access SNMP on this device, it must be added with the `SNMPMANager` command and given access with the `SNMPAccess` command. When using SNMP v3, the SNMP Manager must support EngineID Discovery (RFC 5343) since there is no current way to display the EngineID being used by the device.

Enable or Disable SNMP

To enable or disable SNMP, issue the following command:

```
snmp [enable | disable | wipe]
```

- `enable` - Enables SNMP
- `disable` - Disables SNMP
- `wipe` - Clears the configuration and disables SNMP
- No parameter - Displays the current setting

Example: `snmp enable`

Add or Remove an SNMP Manager

Add information about an SNMP Manager that will be accessing the device or receiving notifications from the device. An SNMP Manager must be added even if the Manager will not be receiving notifications from the device. The Manager can be removed when no longer in use.

To add or remove an SNMP Manager, issue the following command:

```
snmpmanager [add/remove] [name] [community name] [address] [params]
```

- `params` - Specifies one of the following:

```
noauthnopriv-v1  
noauthnopriv-v2  
noauthnopriv-v3  
authnopriv-v3  
authpriv-v3
```

- `auth` = authentication
- `priv` = privacy

Examples:

```
snmpmanager add testsitemanager testsitename 192.168.0.255 authpriv-v3
```

```
snmpmanager remove testsitemanager
```

For SNMPv2, the `community name` parameter is the SNMP community string.

As a security best practice, `authpriv-v3` (full SNMPv3) should be used.

Enable or Disable Unrestricted SNMP Access

By default, SNMP managers sending requests with a community string as the only authentication must send those requests from the IP address indicated when the manager was defined with the `SNMPMANager` command. The following command can be used to remove that restriction by changing the setting to `on`:

```
snmpallowall [on/off]
```

- `on` - Allows all managers
- `off` - Allows only permitted managers
- No parameter- displays current setting

By default, the command is set to `off`.

SNMPv3 requests are not affected by this command. SNMPv3 security is used to control access and does not check IP addresses.

Configure SNMP Access Information

This enables SNMP requests and provides the needed information for an SNMP Manager that has been created with the `SNMPMANager` command.

```
snmpaccess [community] [param] [-a:securitytype -p:password [-e:privacytype [-k:key] ] ]
```

- `param` = `readonlyaccess`, `readwriteaccess`
- `securitytype` = MD5, SHA, SHA224, SHA256, SHA384, SHA512
- `privacytype` = DES, AES, AES192, AES256

The `-a` and `-p` options are required if the SNMP Manager was configured with `authnopriv-v3`, `authpriv-v3`.

The `-e` and `-k` options are required if the SNMP Manager was configured with `authpriv-v3`.

The string passed to the `-p` and `-k` options must be at least 8 characters long.

The MD5 authentication type and DES privacy types are not available when the device is in FIPS 140-2 operation.

Example: `testsitename readwriteaccess -a:sha512 -p:secretstring1 -e:aes256 -k:secretstring2`

Enable or Disable SNMP Notifications

Notifications will be sent to all SNMP Managers that have been configured via the `SNMPMANager` and `SNMPAccess` commands. The device currently supports TRAP notifications and does not support INFORM notifications.

To enable or disable SNMP notifications, issue the following command:

```
snmptrap [on|off]
```

- `on` - Enables traps
- `off` - Disables traps
- No parameter- Displays the current setting

Example: `snmptrap on`

Add Users and Groups

It is likely that additional users—either local or via Active Directory® credential management—will need to be given access to the device. Refer to the [User and Group Management on page 20](#) section for instructions.

Enable Sending Audit Logs to Remote Syslog Server

Devices do not send audit logs to a remote Syslog server by default. To enable sending to a remote Syslog server, issue the following command:

```
remotesyslog [-s:] {-e:} {-a} [-i:address] [-p:port] {-t:protocol} {-v:on|off}
```

- `-s:on|off` enables or disables remote system error logging
- `-e:ok|info|notice|warning|error|fatal` decides which types of errors are logged. Selecting a tier results in logging errors of that level of importance and above in a hierarchy from `ok` to `fatal`.
 - `ok` - Logs all "OK" errors and above to Syslog
 - `info` - Logs all "info" errors and above to Syslog
 - `notice` - Logs all "notice" errors and above to Syslog (default)
 - `warning` - Logs all "warning" errors and above to Syslog
 - `error` - Logs all "error" errors and above to Syslog
 - `FATAL` - Logs all "fatal" errors and above to Syslog
- `-a log`
 - Accesses Syslog contents of the audit log if remote system error logging is enabled

- `-i:address`
 - Replaces `address` with the remote Syslog server IP address in dot decimal notation or an ASCII string containing the server host name (max 255 characters)
- `p:port`
 - Replaces `port` with the remote Syslog server port number in decimal notation
- `-t:tcp|udp|ssl`
- `-v:on|off`
 - If `ssl` is selected, select `on` to verify the server or `off` to not verify the server. Not entering a parameter displays the current setting.

To test the command, run the following script:

```
rsyslog -s:on -a -i:172.30.144.58 -p:23456 -t:SSL -v:off
```

As a security best practice, the options `-t:ssl` and `-v:on` should be used.

Secure Control System Connection

If this device is connected to a control system, set the user name and password for the control system CIP connection by issuing the following command:

```
setcsauthentication -n:username -p:password
```

- `n` - Specifies name of the user (domain users enter `domain\username`)
- `p` - Specifies password

Example: `setcsauthentication -n:remotecs -p:randompassword string`

Management Functions

The following sections provide information about device management functions.

Firmware Update

To perform a firmware update:

1. SFTP the .puf firmware file to the **/firmware** location on the device.
2. Enter the `puf <filename>` command in the console, where `<filename>` is the complete filename of the .puf file, including the filename extension.

User and Group Management

Local users and groups can be added to the device after an administrator account has been created. Additionally, the device can grant access levels to existing domain (Active Directory) users and groups.

The following sections describe how to manage users and groups on the device.

User Group Rights

The device has built-in access levels representing various roles that can be assigned to a group. These access levels apply to all users within that group. Each access level is associated with a set of specific permissions:

NOTE: Permissions 5 and 6 in the following list are not applicable to the DGE-1000.

1. Access system information and status (read-only).
2. Connect to the device Web XPanel interface.
3. Authenticate CIP and gateway connections.
4. Receive complete administrator access, including managing user accounts and all system settings.
5. Issue programmer commands for user programs, such as loading programs and related files.
6. Issue operator commands for user programs, such as restarting programs.

The following table indicates the permissions that are given to each of the available access levels. The numbers in the table header row correlate with the numbered list items above.

Default Rights of Local Groups

	1	2	3	4	5	6
Administrator	Yes	Yes	Yes	Yes	Yes	Yes
Programmer	Yes	Yes	Yes	No	Yes	Yes
Operator	Yes	Yes	Yes	No	No	Yes
User	No	Yes	No	No	No	No
Connection Only	No	Yes	Yes	No	No	No

By default, the device has five groups available (one for each access level): Administrator, Programmer, Operator, User, and Connection Only. The initial user is added to the Administrator group. The default groups may be used, or custom groups can be created with the appropriate access level permissions as needed.

Add Local User

To add a local user to the device, issue the following command:

```
adduser -n:username -p:password
```

- `username` - Specifies the name of the local user that is to be created
- `password` - Specifies a password for the local user

Example: `adduser -n:jsmith -p:user01`

A local user is created without access rights. To assign access rights to a local user, the user must be added to at least one local group. For more information, refer to the [Add User to Group on page 24](#) section.

Delete Local User

To remove a local user from the device, issue the following command:

```
deleteuser username
```

- `username` - Specifies the name of the local user who is to be removed

When a local user is removed, the user is also removed from any local groups.

Add Local Group

To add a local group to the device, issue the following command:

```
addgroup -n:groupname -l:accesslevel
```

- `groupname` - Specifies the name of the local group that is to be created
- `accesslevel` - Specifies the access level for the local group:
 - `a` - Administrator
 - `p` - Programmer
 - `o` - Operator
 - `u` - User
 - `c` - Connection only

Example: `addgroup -n:cresprogs -l:p`

NOTE: A predefined access level must be assigned to a group when it is created.

When a user is added to a group, the user inherits the access level set for the group. Certain device functions and console commands are accessible only to users with corresponding access levels.

If a user belongs to multiple groups, the user's access level is the combined access level of all groups that contain the user.

Delete Local Group

To remove a local group from the device, issue the following command:

```
deletegroup groupname
```

- `groupname` - Specifies the name of the local group

When a local user group is removed, users in the group are not removed from the device. However, the user will lose the access rights associated with the removed group.

List Local Groups

Users with administrator privileges can view all local groups added to the device. The device comes with the following built-in groups that cannot be deleted by any user: Administrators, Programmers, Operators, Users, and Connects.

To view a list of all local groups added to the device, issue the following command:

```
listgroups [a] [p] [o] [u] [c]
```

- `a` - Groups with administrator rights are listed
- `p` - Groups with programmer rights are listed
- `o` - Groups with operator rights are listed
- `u` - Groups with user rights are listed
- `c` - Groups with connect-only rights are listed

Example: `listgroups p`

Add Domain Group

To add an existing domain group to the device, issue the following command:

```
adddomaingroup -n:groupname -l:accesslevel
```

NOTE: Use the `adlogin` command to log in to the Active Directory server.

- `groupname` - Specifies the name of the domain group to be added
- `accesslevel` - Specifies the access level for the domain group:
 - `a` - Administrator
 - `p` - Programmer
 - `o` - Operator
 - `u` - User
 - `c` - Connection only

Example: `adddomaingroup -n:adprogs -l:p`

NOTE: The device cannot create or remove a group from the domain service, but it can grant an access level to an existing domain group.

All users of the domain group inherit the access level set for the group. Certain device functions and console commands are accessible only to users with corresponding access levels.

Remove Domain Group

To remove a domain group from the device, issue the following command:

```
deletedomaingroup groupname
```

- `groupname` - Specifies the name of the domain group

When a domain group is removed from the device, it is not deleted from the domain service. Once the group is removed from the device, all members of that group lose access to the device.

List Domain Groups

Users with administrator privileges can view all domain groups that were added to the device by issuing the following command:

```
listdomaingroups [a] [p] [o] [u] [c]
```

- `a` - Domain groups with administrator rights are listed
- `p` - Domain groups with programmer rights are listed
- `o` - Domain groups with operator rights are listed

- `u` - Domain groups with user rights are listed
- `c` - Domain groups with connect-only rights are listed

Example: `listdomaingroups p`

List Users

To view all users (local and domain) that have been added to local groups, issue the following command:

```
listusers
```

- No parameter - Lists all users that have been added to local groups

List Group Users

To view all users that have been added to a specific group, issue the following command:

```
listgroupusers groupname
```

- `groupname` - Specifies the group name that should be queried

Example: `listgroupusers cresprogs`

Show User Information

To view the access rights of a particular user, issue the following command:

```
userinformation username
```

- `username` - Specifies the user name that should be queried

Example: `userinformation jsmith1`

Add User to Group

To add a local or a domain user to a local group, issue the following command:

```
addusertogroup -n:username -g:groupname
```

- `username` - Specifies the name of the local or domain user
- `groupname` - Specifies the name of the local group

Example: `addusertogroup -n:jsmith1 -g:cresprogs`

Local users are created on the device without any access rights. Adding a user to a local group grants the user the access level assigned to the group.

NOTE: The device cannot create or remove a user from the domain service, but it can grant an access level to an existing domain user. This may be accomplished either by adding the domain user to a local group on the device or by adding the domain group(s) of which the user is a member to the device.

Remove User from Group

To remove a local or a domain user from a local group, issue the following command:

```
removeuserfromgroup -n:username -g:groupname
```

- `username` - Specifies the name of the local or domain user
- `groupname` - Specifies the name of the local group

Example: `removeuserfromgroup -n:jsmith1 -g:cresprogs`

Update Local Password

To update the current user's password, issue the following command:

```
updatepassword
```

Users may update their password. The user is prompted to enter the current password once and the new password twice. If the old password does not match the current password, the operation fails and the password is not changed.

Reset User Password

To reset a user's password, issue the following command:

```
resetpassword -n:username -p:defaultpassword
```

- `username` - Specifies the user whose password will be reset
- `defaultpassword` - Specifies a default password that can be provided to the user following the reset

Example: `resetpassword -n:jsmith1 -p:Default321!`

User Login IP Blocking Management

When User Login IP Blocking is enabled and a user reaches the maximum number of login attempts over an Ethernet connection, the client's IP address is blocked. Administrators have access to commands that allow them to manage the blocked IP addresses, including manually blocking and unblocking IP addresses.

List Blocked IP Addresses

To view all blocked IP addresses, issue the following command:

```
listblockedip
```

- No parameter - Lists all blocked IP addresses

Add IP Address to Blocked List

To add an IP address to the blocked list manually, issue the following command:

```
addblockedip [ipaddress]
```

- `ipaddress` - Enter the IP address that is to be blocked
- No parameter - Lists all blocked IP addresses

Example: `addblockedip 255.255.255.255`

Remove IP Address from Blocked List

To remove an IP address from the blocked list manually, issue the following command:

```
remblockedip [ALL|ipaddress]
```

- `ipaddress` - Enter the IP address that will be removed from the blocked list
- `ALL` - Remove all blocked IP addresses
- No parameter - Lists all blocked IP addresses

Example: `remblockedip 255.255.255.255`

User Account Locking Management

When User Account Locking is enabled and a user reaches the maximum number of login attempts, the user account is locked. Administrators have access to commands that allow them to manage the user accounts, including manually locking and unlocking accounts.

Add User to Locked List

To add a user to the locked list, issue the following command:

```
addlockeduser [name]
```

- `name` - Specifies the user account that is to be locked.
- No parameter - Lists all locked user accounts

Example: `addlockeduser jsmith1`

Remove User from Locked List

To remove a user from the locked list, issue the following command:

```
remlockeduser [name]
```

- `name` - Specifies the user account that is to be removed from the locked list.
- No parameter - Lists all locked user accounts

Example: `remlockeduser jsmith1`

List Locked User

To view a list of locked user accounts, issue the following command:

```
listlockeduser
```

- No parameter - Lists all locked user accounts

Certificate Management

X.509 certificates are used for a number of purposes by the device, including authentication by various protocols. These certificates can be added, removed, and managed from the console. It is important to understand the different kinds of certificates, their purpose, and how to install and configure each of them.

The device supports three basic types of certificates:

- **Trust Certificates:** These certificates are used to determine whether certificates presented by other entities are trusted. There are two types of trust certificates: Root and Intermediate. Both types serve the same purpose.
- **Server Certificates:** A server certificate is a certificate presented by a protocol when acting as a server to prove its identity. Clients connecting to that server will verify that server certificate. Server certificates loaded onto the device must also load the associated private key for that certificate since the private key is required as part of the process of proving identity.
- **Client Certificates:** A client certificate is a certificate presented by a protocol when acting as a client to prove its identity. When a client connects to a server, that server will verify that client certificate. Client certificates loaded onto the device must also load the associated private key for that certificate since the private key is required as part of the process of proving identity.

NOTE: There are some certificates that can be both a server and client certificate and, therefore, can be used for either purpose.

The device stores certificates by category based upon how they are used:

- **Root:** These are the default Trust Certificates to which the device will verify server certificates against when acting as a TLS client. Root certificates are the start of a certificate chain and can be identified by the Issuer and Subject fields of the certificate being the same. The device may use an alternate list of trusted certificates for certain protocols or use cases but, unless specifically indicated, this Root store will be used.
- **Intermediate:** This is identical to the Root category, except that this store contains only intermediate certificates, which are Trust Certificates that were signed by another certificate (the Issuer field will be different than the Subject field). The default list of trusted certificates is the combination of all the Root and Intermediate certificates.
- **Machine:** This category contains a single client certificate and is used only for 802.1X, and only when EAP-TLS authentication is chosen. This must include a private key.
- **Web Server:** This category contains a single server certificate and is the server certificate used by the web server. This must include a private key.

Certificate Requirements

The device supports standard X.509v3 certificates. The following algorithms are supported for the public key and signatures:

- **RSA:** Key lengths of 2048, 3072, or 4096 bits
- **ECC:** secp256r1, secp384r1, and secp521r1
- **Hash:** SHA-1, SHA-256, SHA-384, or SHA-512

Certificate Commands

The following sections provide information about commands that allow the user to add, remove, and show certificates.

Add a Certificate (Fixed File Name)

To add a certificate that has a predefined file name, load the certificate file into the **/cert** directory on the device using SFTP. The file must have the file name specified below, depending on the type of certificate.

```
certificate add <certificate store> [password]
```

- `certificate store` - Specifies the category name indicating the purpose of the certificate: `root`, `intermediate`, `machine`, or `webserver`.
- `password` - Specifies the password required to access a private key in the file. It is optional and only used when a password-protected private key is included in the file.

Example: `certificate add intermediate`

The file name to use along with the format and contents of the certificate file all depend on the category chosen:

- `root`: The file must be named **root_cert.cer** and must be in standard pem format. It should only contain a root certificate.
- `intermediate`: The file must be named **intermediate_cert.cer** and must be in standard pem format. It should only contain an intermediate certificate.
- `machine`: The file must be named **machine_cert.pfx** and must be in standard PKCS #12 format. It should only contain a client certificate and its associated private key. If a password is needed to access the file, it must be provided as part of the command.
- `webserver`: The file must be named **webserver_cert.pfx** and must be in standard PKCS #12 format. It should only contain a server certificate and its associated private key. If a password is needed to access the file, it must be provided as part of the command. Make sure to load the web server certificate's signing chain into the Root and Intermediate Trust stores before loading the web server certificate itself. If the signing chain is not present, loading of the web server certificate will fail. If that signing chain is not available, or loading it into the device is not desired, disable the verification check prior to loading the web server certificate by issuing the `sslverify -s:off` command.

Certificates are stored by category, which must be specified when using any of the standard certificate management commands.

Add a Certificate (Specified File Name)

To add a certificate that has a user-defined file name, the command is identical to the previous command for loading certificates with a fixed file name—the only difference is that the file name to be used is specified as part of the command. Load the certificate file into the `/cert` directory on the device using SFTP. The file must have the file name specified below, depending on the type of certificate.

```
certificate addf <certificate name> <certificate store> [password]
```

- `certificate name` - Specifies the file name containing the certificate
- `certificate store` - Specifies the category name indicating the purpose of the certificate: `root`, `intermediate`, `machine`, or `webserver`
- `password` - Specifies the password required to access a private key in the file. It is optional and only used when a password-protected private key is included in the file.

Example: `certificate addf device-server.pfx webserver secretpass`

The format and contents of the certificate file depend on the category chosen:

- `root`: The file must be in standard pem format. It should only contain a root certificate.
- `intermediate`: The file must be in standard pem format. It should only contain an intermediate certificate.
- `machine`: The file must be in standard PKCS #12 format. It should only contain a client certificate and its associated private key. If a password is needed to access the file, it must be provided as part of the command.
- `webserver`: The file must be in standard PKCS #12 format. It should only contain a server certificate and its associated private key. If a password is needed to access the file, it must be provided as part of the command. Make sure to load the web server certificate's signing chain into the Root and Intermediate Trust stores before loading the web server certificate itself. If the signing chain is not present, loading of the web server certificate will fail. If the signing chain is not available, or loading it into the device is not desired, disable the verification check prior to loading the web server certificate by issuing the `sslverify -s:off` command.

Remove a Certificate

To remove a certificate from the device, issue the following command:

```
certificate rem <certificate store> [certificate number] [certificate name]
[certificate uid]
```

- `certificate store` - Specifies the category name indicating the purpose of the certificate: `root`, `intermediate`, `machine`, or `webserver`
- `certificate number` - Specifies the number that identifies the specific certificate to remove
- `certificate name` - Specifies the name that identifies the specific certificate to remove
- `certificate uid` - Specifies the UID that identifies the specific certificate to remove

Example: `certificate rem intermediate 1`

Only one identifier (number, name, or UID) is needed. These identifiers can be determined by listing the certificates using the command described below.

View a Certificate

To view additional details about a certificate, issue the following command:

```
certificate view <certificate store> [certificate number] [certificate name]
[certificate uid]
```

- `certificate store` - Specifies the category name indicating the purpose of the certificate: `root`, `intermediate`, `machine`, or `webserver`
- `certificate number` - Specifies the number that identifies the specific certificate to view
- `certificate name` - Specifies the name that identifies the specific certificate to view
- `certificate uid` - Specifies the UID that identifies the specific certificate to view

Example: `certificate view intermediate 1`

Only one identifier (number, name, or UID) is needed. These identifiers can be determined by listing the certificates using the command described below.

List Certificates

To show the list of certificates loaded in the device for a specific category, issue the following command:

```
certificate listn <certificate store>
```

- `certificate store` - Specifies the category name indicating the purpose of the certificate: `root`, `intermediate`, `machine`, or `webserver`

Example: `certificate listn root`

The certificates will be listed with their name and identifiers, which can be used for the remove and view commands.

Backup and Restore Functionality

Crestron products provide users with the ability to back up and restore configuration information for a product.

- This functionality is currently supported only using the console interface.
- A configuration backed up on a certain device type can only be restored on the same device type.
- The configuration file generated is password protected. The following password rules apply:
 - The password must be less than 128 characters.
 - The string must be double quoted if it contains spaces.
 - Printable characters including spaces (with the exception of the single quote character) are permitted.
- If the directory option is given for `exportall`, then the same directory option must be given for `importall`.

NOTE: A backup can be created only when there are no user programs running on the control system. To stop all programs, issue the `stopprog -p:all` command.

To use the backup and restore function, issue the following command:

```
configutils [exportall|importall] [-p[:password]] [-d:directory]
```

- `exportall` - Exports all data settings to the device firmware folder.
- `importall` - Imports all data settings from the device firmware folder.
- `-f` - Add to not prompt for an import.
- `-p[:password]` - Password to encrypt data. If a password is not provided, the console will prompt to enter it.
- `-d[:directory]` - An alternate directory to store the backup.

Example: `configutils importall -p:password`

CAUTION: Issuing `configutils importall` will restart the device.

Additional Instructions

The instructions in this section are not specific to this device. However, they may be useful to an administrator when setting up and configuring the device.

Use OpenSSL to Create a Certificate Signing Request (CSR)

In most cases, a CSR must be provided to a certificate signing authority to receive a signed certificate. When requesting a signed certificate for this device, you may not want to or be able to generate the CSR on the device itself. In these cases, OpenSSL may be used to create the CSR.

This process can be accomplished by following these instructions on any Windows® or Linux® OS-based computer with OpenSSL version 1.0.2 or newer installed. As a security best practice, ensure that the version of OpenSSL installed is FIPS 140-2 certified.

NOTE: In the following instructions, the example file names include a generic *name* descriptor. It is recommended to replace *name* with a string that identifies the device that will receive the requested certificate so you can more easily match the certificate files with the appropriate device.

Create a Configuration File

First, a configuration file that will be used to generate the CSR must be created. This file will contain information about the CSR and any information that should be included in the CSR.

Create a text file called *name-csr-openssl.cnf* with the following contents:

```
# OpenSSL configuration file for CSR generation

# CSR configuration - Change sha256 to alternate hash function if desired
[ req ]
default_md          = sha256
distinguished_name  = req_distinguished_name
string_mask         = utf8only
utf8                = yes
prompt             = no
req_extensions      = req_ext

# Extensions to be included - Currently SAN only
[req_ext]
subjectAltName = @alt_names

# Information to put in certificate Subject field - fill in desired values
# Comment out any items not desired (only commonName is required)
[ req_distinguished_name ]
commonName          = Device.Fully.Qualified.Domain.Name
countryName         = optional
stateOrProvinceName = optional
localityName        = optional
#.organizationName = optional
organizationalUnitName = optional
emailAddress        = optional

# List of information to put in SAN extension - fill in desired values
# Additional names or IP addresses can be added if necessary
[ alt_names ]
DNS.1 = Device.Fully.Qualified.Domain.Name
```

Modify the text file to include the information specific to the device and the network site. This information will be put into the Subject field of the certificate and is specified in the `[req_distinguished_name]` section of the text file. The `commonName` entry must be filled in and should be the FQDN of the device.

All other fields are optional and should be filled in or commented out (if not commented out, the certificate will contain "optional" as the value of that field). Note that the `countryName` field is only allowed to be 2 characters.

The following example shows a sample of this section containing filled and empty fields:

```
[ req_distinguished_name ]
commonName          = deviceName.crestron.com
countryName         = US
stateOrProvinceName = NJ
localityName        = Rockleigh
#.organizationName = Crestron Electronics
#organizationalUnitName = optional
#emailAddress        = optional
```

This CSR will also request the standard Subject Alternate Name (SAN) extension to be included in the certificate. The information to include in this extension is specified in the [`alt_names`] section of the text file. At least one entry is required, and that entry should match the FQDN specified in the `commonName` field above.

Add additional names that may be used when connecting to the device. Each additional name must use an incremented number in the suffix for the "DNS" identifier. IP addresses are also supported if needed.

The following example shows a sample of this section filled out for a device with three names and two IP addresses:

```
[ alt_names ]
DNS.1 = deviceName.crestron.com
DNS.2 = alternateName.crestron.com
DNS.3 = thirdname.crestron.com
IP.1 = 192.168.0.10
IP.2 = 10.0.0.5
```

Finally, if your certificate signing authority requires the CSR to be signed with a stronger hash than SHA256, the `default_md` field in the [`req`] section can be changed. Change `sha256` to `sha384` or `sha512` as needed.

Generate the Private Key

Generate a 2048 bit RSA key by issuing the following command:

```
openssl genrsa -out name.key.pem 2048
```

If desired, replace the 2048 parameter with 3092 or 4096 to generate a longer key of that length.

Create the CSR

Create the CSR using the key and information in the configuration file:

```
openssl req -config name-csr-openssl.cnf -key name.key.pem -new -out name.csr.pem
```

If you wish to view the CSR in text form to confirm it contained the expected information, use the following command:

```
openssl req -noout -text -in name.csr.pem
```

Create and Sign the Certificate

The certificate must be created and signed by the trusted signing authority for the network the device will be used on. Provide the CSR file (`name.csr.pem`) to your signing authority to create and sign the certificate. The signing authority should return the signed certificate along with the signing chain for that certificate.

Load the Certificate

To load the certificate as the Web Server certificate, the certificate and key must be placed into a PKCS #12 file. Ensure that the certificate provided by the signing authority is in PEM format, and then issue the following command, where *name.cert.pem* is the file from the signing authority with the certificate in PEM format.:

```
openssl pkcs12 -export -out name.certandkey.pfx -inkey name.key.pem -in  
name.cert.pem
```

OpenSSL will ask for an "Export Password". Enter a password which will be used to protect the PKCS #12 file. It will then ask you to confirm that password.

Next, follow the instructions in [Required Configuration on page 5](#) for loading a Web Server certificate. Make sure to provide the Export Password that was entered above when loading the certificate file into the device.

Clean Up

Once successfully loaded onto the device, wipe the local copy of the private key (in the file *name.key.pem*) on the computer used to generate the CSR, as this contains the secret information specific to that certificate for that device.

